


- For Pyramix users, follow this document to upgrade from V8.0 to V8.1
- For Pyramix & VCube Essentials users, use this document in conjunction with the VCube V4.0 to V4.1 guide
- For Pyramix & VCube LE / SE / XE users, use this document in conjunction with the VCube V4.0 to V4.1 guide
- For VCube users, use the VCube V4.0 to V4.1 guide only
- HORUS: Horus users should install the latest certified firmware (*Version 1.1.7 build 20795*)
Available here: <http://www.merging.com/horus/download>
- Please note than if you wish to uninstall/reinstall Pyramix 8.1 – MassCore must be uninstalled via the MT Security Panel > MassCore Tab > Uninstall MassCore.

Manual removal of MassCore (Interval Zero RTX) via Windows Add/Remove Programs is not recommended.

BACKUP SETTINGS

Within the Pyramix application, navigate to the following menus and export Pyramix settings:

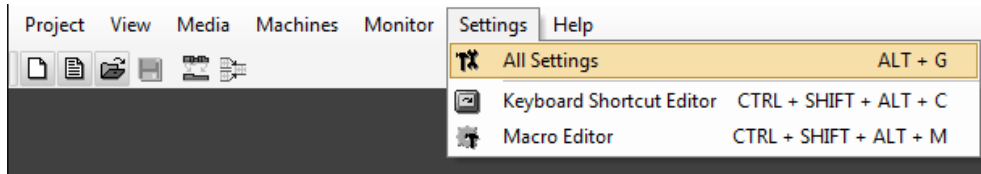

Settings > All Settings > Save > Save Pyramix settings file (*.pms)
 Settings > Keyboard Shortcuts > Save Table > Save Pyramix Keyboard Shortcut file (*.pmk)
 Settings > Macro Editor > Export > Save Pyramix Macro file (*.pmm)

BACKUP FILES


In Windows Explorer create a backup copy of the following folders:

C:\Program Files\Merging Technologies\Pyramix Virtual Studio\Projects
 C:\Program Files\Merging Technologies\Pyramix Virtual Studio\Reports
 C:\Program Files\Merging Technologies\Pyramix Virtual Studio\Templates
 C:\PMX Media
 C:\PMX_ALT_BACKUP

UNINSTALL

Windows XP Start Menu > Control Panel > Add/Remove Programs
 Windows Vista / 7 Start Menu > Control Panel > Programs & Features

- Uninstall Pyramix
- Uninstall the following Windows Driver Packages

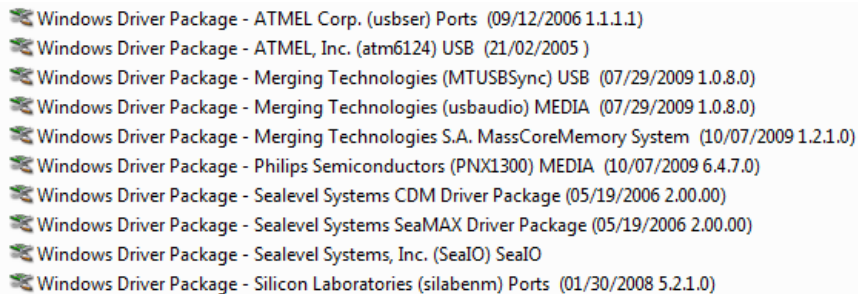

If Masscore is installed:

- Uninstall Interval Zero RTX 2009
- Don't Reboot
- Run MT Cleanup utility
- Reboot the PC

INSTALL

- Run the current Pyramix installer
- Install all necessary prerequisites for Version 8
- Accept License Agreement
- Leave User Name as is
- Choose Complete setup type
- Choose Install
- During the installation process, 9 Windows Security messages will appear. Choose Install for all of these
- At the end of the installation, choose Yes to restart your computer
- Reboot



MT SECURITY SETTINGS


- After reboot, you will need to navigate to the Security panel

Start Menu > Control Panel > MT Security Settings

- Click Import Key
- Browse to your Merging *.mtk file
- Click to Open
- When prompted, choose Yes, you are sure you want to enter the new keys

MASSCORE

- Ensure that MT Security Settings can read your Mykerinos Card / Dongle Serial Number
- Ensure that *Include Keys on SafeNet Dongles in MT Security* is ticked
- Go to the *MassCore* tab
- Click *Install MassCore RunTime*
- When prompted, choose Install to install IntervalZero software
- When Complete, close MT Security Settings
- Reboot the Machine

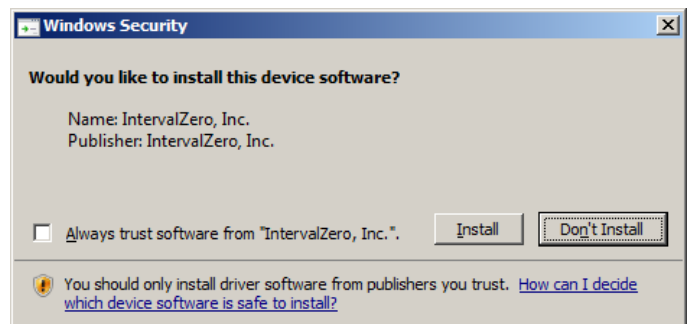


VS3 CONTROL PANEL

Start Menu > Control Panel > VS3 Control Panel

MASSCORE

If using the 'MassCore' platform, select the following settings:

- Application: Pyramix Virtual Studio
- Platform: MassCore
- Latency: Low Latency
- Select Mykerinos or Ravenna hardware 'On Bus'
- Select an appropriate 'Video/TC Master' and 'Monitor Jack'
- If needed, activate either ASIO Bridge or ReWire

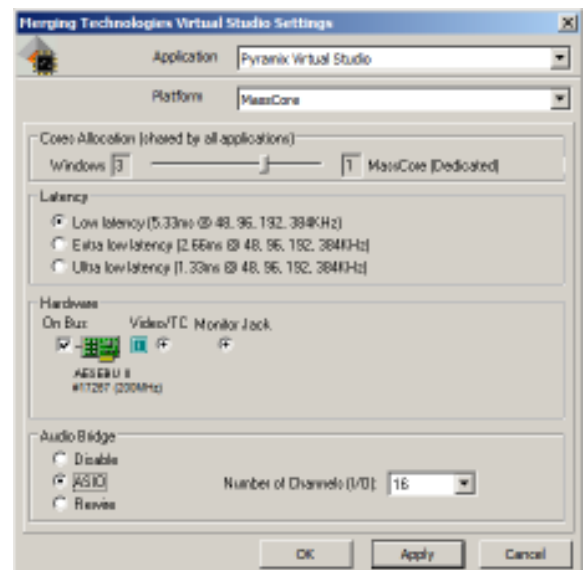


RESTORE FILES

In Windows Explorer restore your copy of the following folders:

```
C:\Program Files\Merging Technologies\Pyramix Virtual Studio\Projects  
C:\Program Files\Merging Technologies\Pyramix Virtual Studio\Reports  
C:\Program Files\Merging Technologies\Pyramix Virtual Studio\Templates  
C:\PMX Media  
C:\PMX_ALT_BACKUP
```

RESTORE SETTINGS

Within the Pyramix application, navigate to the following menus and import Pyramix settings:

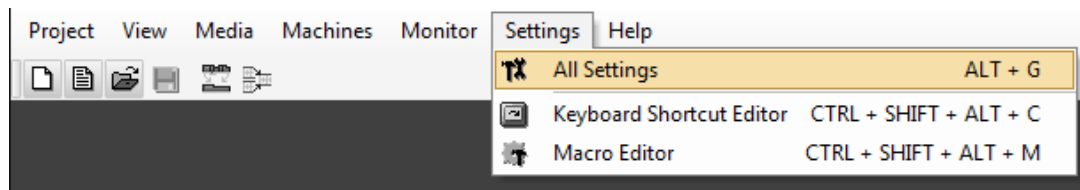

```
Settings > All Settings > Load > Open Pyramix settings file (*.pms)  
Settings > Keyboard Shortcuts > Load Table > Open Pyramix Keyboard Shortcut file (*.pmk)  
Settings > Macro Editor > Import > Open Pyramix Macro file (*.pmm)
```